

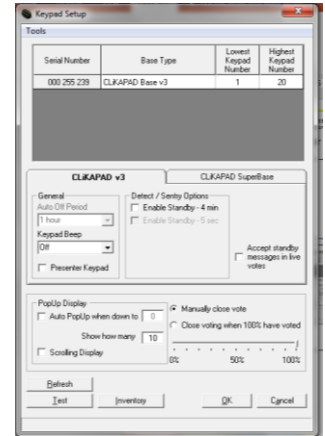


Changing the SID (SOFT IDENTITY) number of a CLIKAPAD – CP31 & 37


1. Attach the base station to your computer and go open PowerPoint.
2. Go to **Add-Ins** tab then open the **CLIKAPAD** menu > **Set-up** > **Keypads**. Your standard **Keypad Set-Up** pop-up window will appear

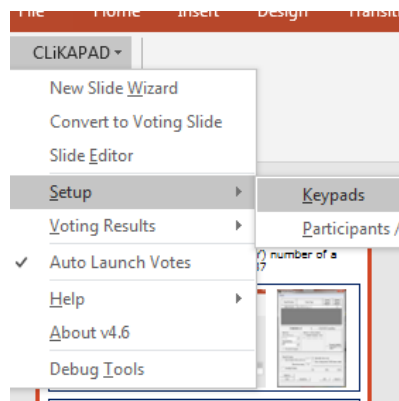

3. On your keyboard press: **CTRL+SHIFT+C** (*all together!*) Then you will see extra options appear

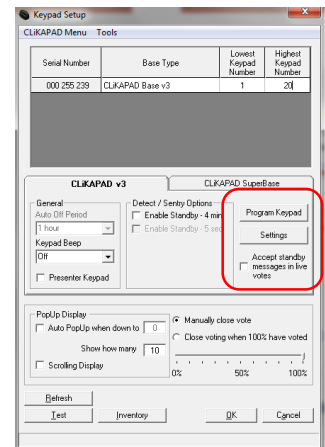


4. Click the Settings button. You will then see the CLIKAPAD Advanced Settings pop-up window appear

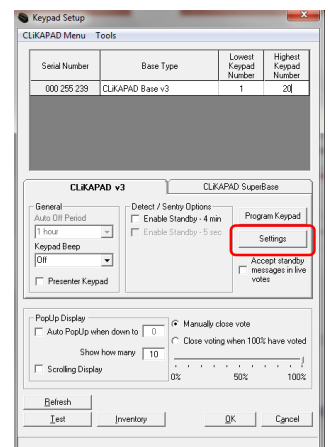


Changing the SID (SOFT IDENTITY) number of a CLiKAPAD – CP31 & CP37

- Click the Retrieve Config button and then press any button on the CLiKAPAD you wish to re-number. You will then see the HID (hard identity – the serial number) and the SID of that specific CLiKAPAD

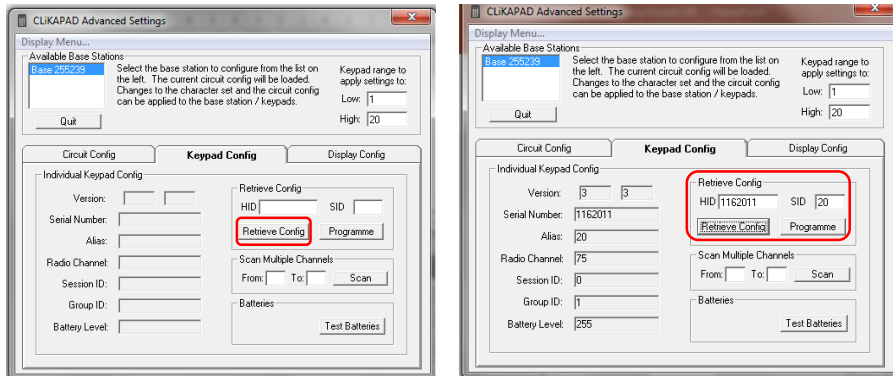

- Change the SID number to the new number you now wish the CLiKAPAD to be identified as. Then click the Programme button and press any key on the same CLiKAPAD. As you can see this keypad as gone from being number 20 to number 1

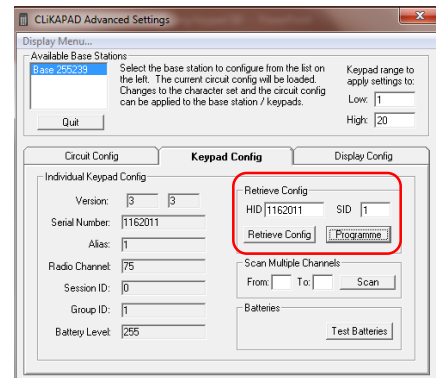

- Once you have done this close the window. This will return you to the keypad set up window. Click the **Test** button and press a number button on the reprogrammed CLiKAPAD.
- You will see that the **new number** position now registers the vote from **this CLiKAPAD**
- Once you have tested your keypads you can close all the windows

